

gizDuino Mini

How can i connect the gizDuino mini to PC?

You need USB to UART - TTL converter.

Unique solution ID: #1013

Author: Roma Mercado

Last update: 2018-04-18 05:14