

# **Smoke Sensor**

## **What is the Operating voltage of Smoke sensor kit?**

Its +9VDC, use external power supply (adaptor) connect it to DC jack of Arduino/gizDuino then in power source VIN.

Unique solution ID: #1068

Author: Administrator

Last update: 2018-04-20 11:17